
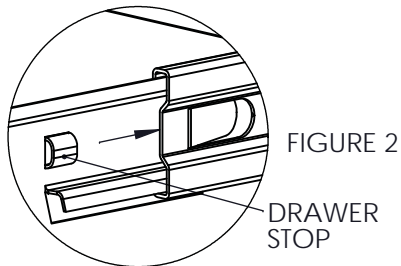


About your *Huot Dispenser*

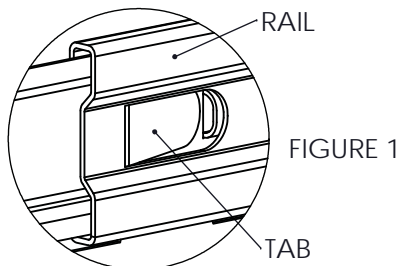

Important!

Open only one drawer at a time.
Do not stack more than 3 units high.

To Remove Drawer

- 1) Fully open drawer, then close slightly so that tab does not contact drawer stop. (figure 1)
- 2) Using a flatblade screwdriver or other suitable instrument, pry tab outward until rail is free, then push rail in until it is disengaged (figure 2).
- 3) Repeat for other side.

Inventory Label Placement

This unit comes with labels which may be used on the top front of each drawer. Additional label sheets are available.

To Replace Drawer

- 1) Insert drawer until drawer stops are beyond the rail tabs. (figure 1).
- 2) Pry tabs inward until they securely engage the drawer stops when opening. Test repeatedly for proper function.