


Huot ClearBoard Installation


For Installation on Huot WorkTables with Upper Framework (not included)

TOOLS REQUIRED:

- #2 Phillips Screwdriver
 - 1 1/32" BOX or ADJUSTABLE WRENCH
 - 7/16" BOX WRENCH
 - 7/16" SOCKET WRENCH & RATCHET HANDLE
- ALL HARDWARE IS INCLUDED

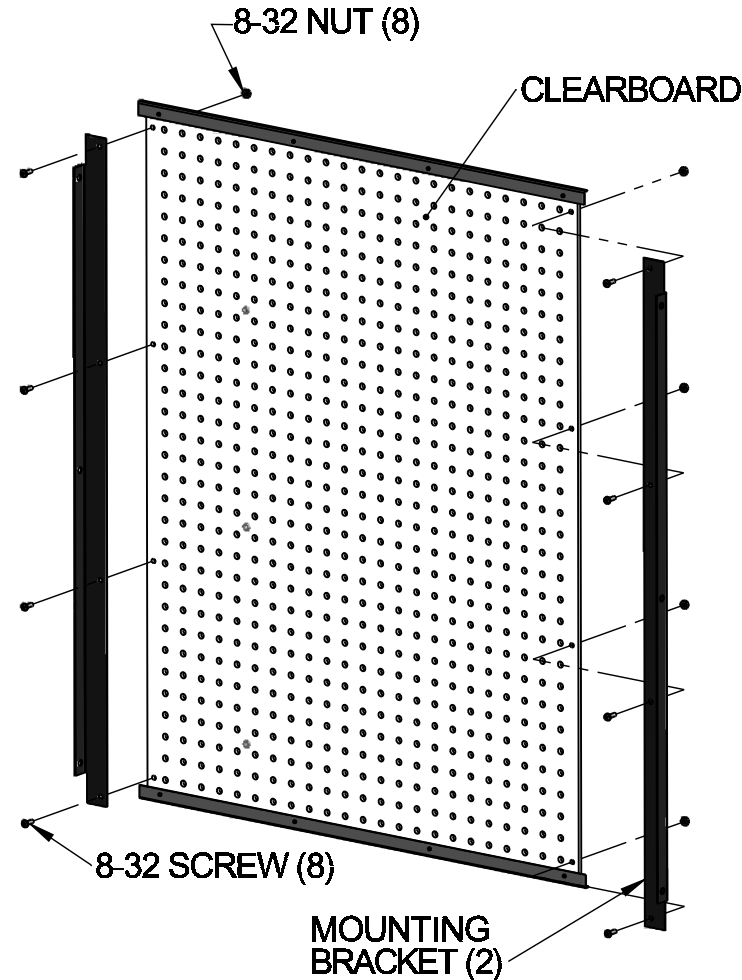

1. Peel back the protective covering on one side of the ClearBoard and attach a Mounting Bracket by loosely installing the 8-32 hardware as shown. Bracket should be on same side of the plastic pegboard as the attached metal brace, with screws entering from this side and the nuts against the pegboard. Don't tighten yet. Repeat for the other side.

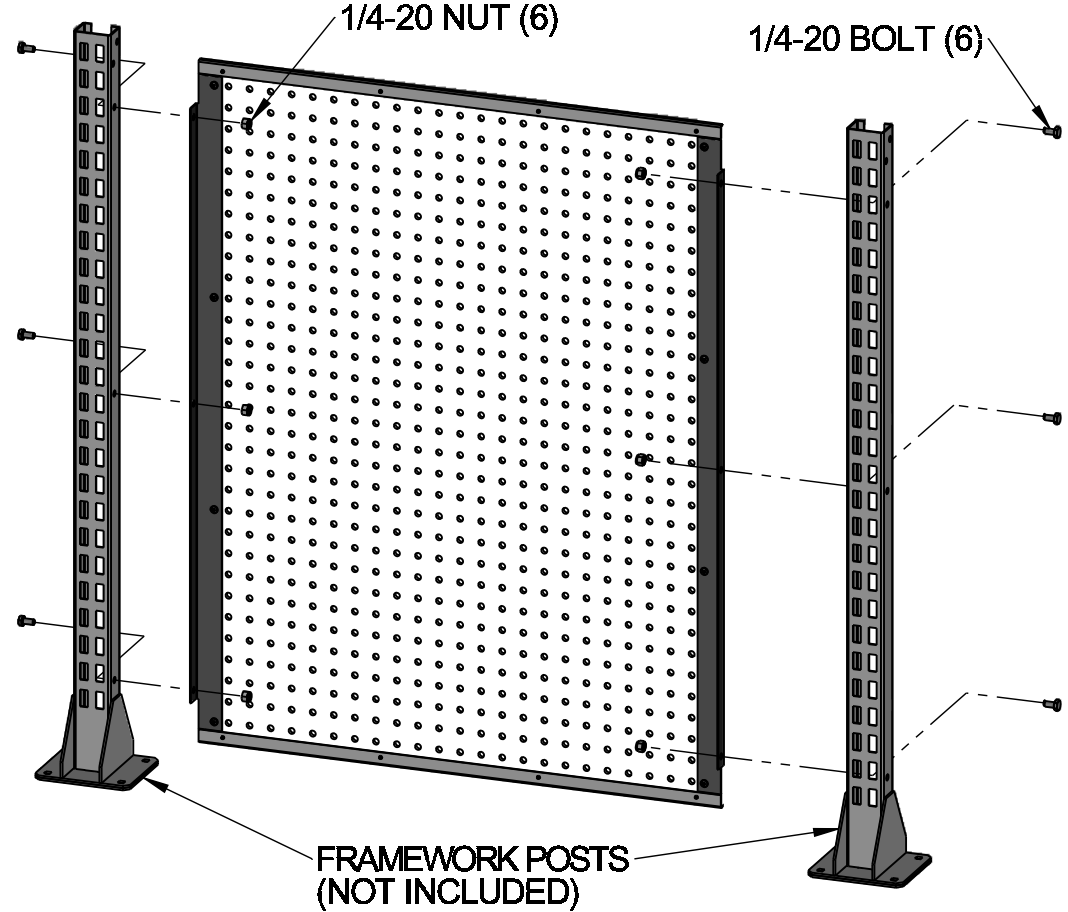

2. Attach your ClearBoard to the FrameWork Posts, bolting through the bracket holes as shown. (Note: It may be necessary to loosen some of the hardware on your WorkTable FrameWork for a proper fit.)
3. Tighten all fasteners.
4. Check all fasteners periodically for tightness.

HUOT MFG. CO.
550 N Wheeler St.
St. Paul, MN 55104

Ph: (651) 646-1869
Fax: (651) 646-0457
www.Huot.com

