


Mounting Your Huot WorkTable Drawer Cabinet

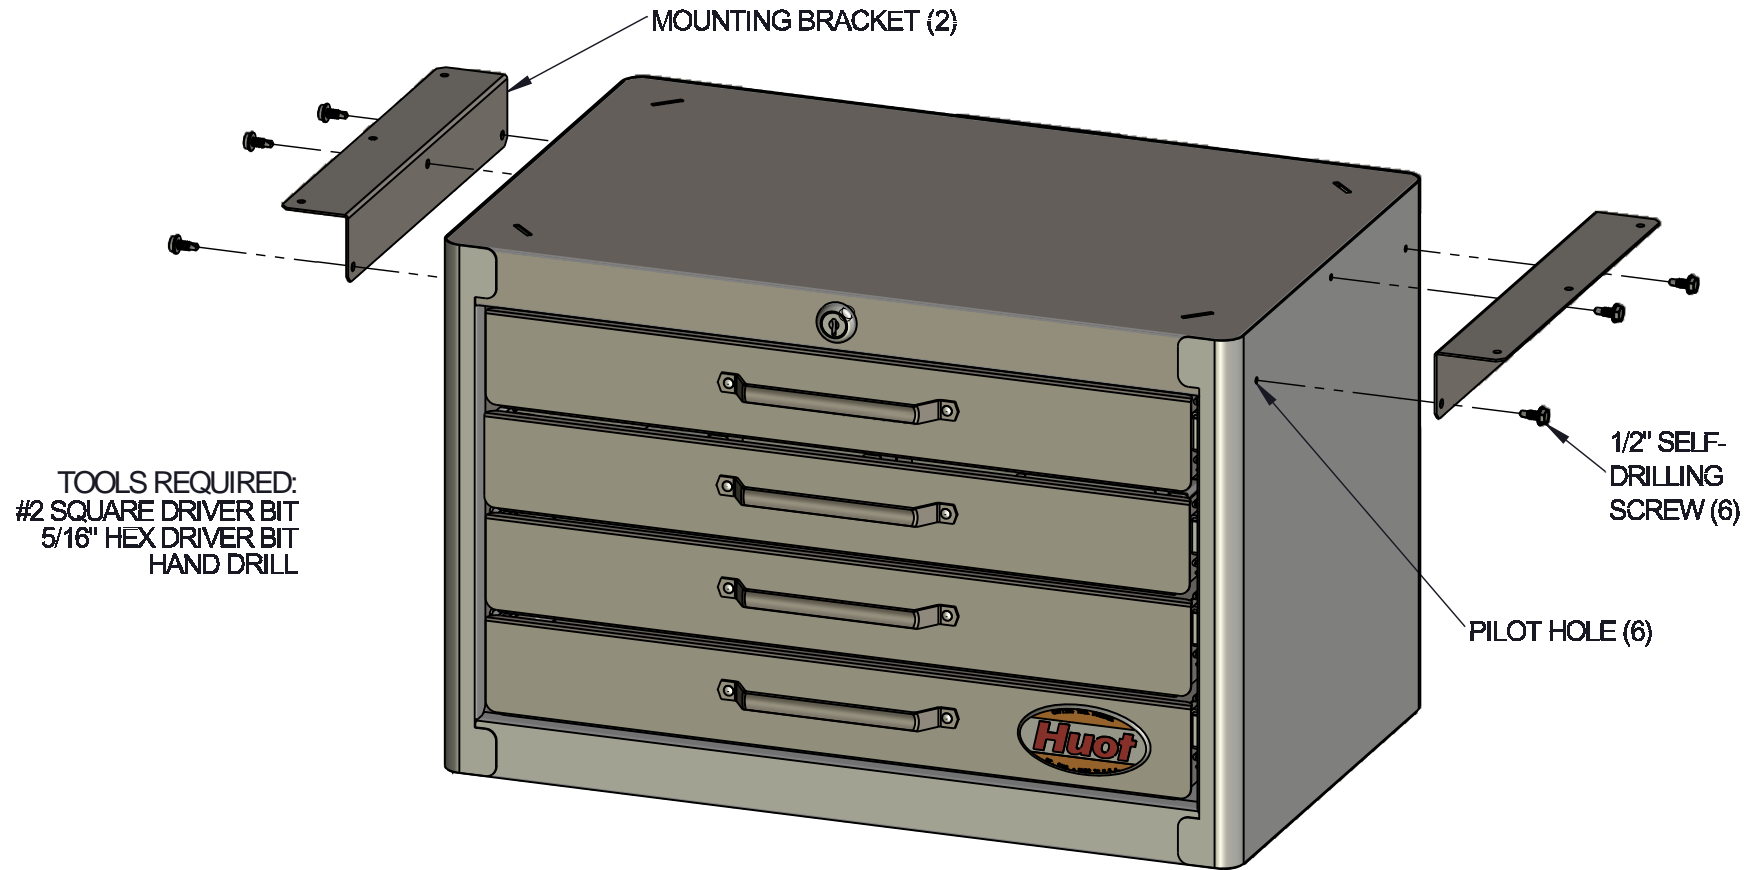

1) Install the two mounting brackets to the sides of your cabinet using the included #10 x 1/2" self-drilling screws, starting each screw at the corresponding pilot hole in the cabinet. Be careful not to use excessive force or spin.

2) Position the cabinet in the desired location and prop securely into place, then install using the furnished 1" hardwood screws and washers. These screws require no pre-drilling, simply place a washer onto a screw, then drive it into the wood with a clockwise rotation. Avoid excessive force & spin.

NOTE: For best results, place the cabinet near the front edge for access to the drawers, recessed 1/2" from the front so that handles, keys, etc. do not protrude.

IMPORTANT NOTE: USE ONLY THE SCREWS THAT ARE INCLUDED WITH THIS PRODUCT. OTHER SCREWS MAY DAMAGE THE WOOD TABLE TOP.

3) Check fasteners periodically for tightness.



HUOT MFG. CO.
550 N Wheeler St.
St. Paul, MN 55104

Ph: (651) 646-1869
Fax: (651) 646-0457
www.Huot.com