
ALL MOUNTING HARDWARE IS INCLUDED 2 PEOPLE ARE REQURED FOR SOME STEPS

UltraScoot Assembly

TOOLS REQUIRED:

7/16" BOX WRENCH 7/16" SOCKET WRENCH **RATCHET HANDLE & EXT.** 9/16" BOX WRENCH 7/32" HEX WRENCH

- **1** On a protective surface and with two people, turn cart on its side.
- **2** Using the large 3/8" bolts and nuts, install casters as shown. Note that the 2 fixed casters go in the middle positions and the 4 swivel casters go on the ends. Also note that the outer bolts are inserted from the bottom while the inner bolts are inserted from the top (as shown in detail view).
- 3. With 2 people, stand cart on its casters. Determine your preferred shelf and tray locations and install. All hardware is 1/4" size and bolts should be inserted from the outside. Discard temporary shipping hardware as you go.
- 4. Install handle in the same manner on the side opposite the utility tray.
- 5. Check all fasteners periodically for tightness.

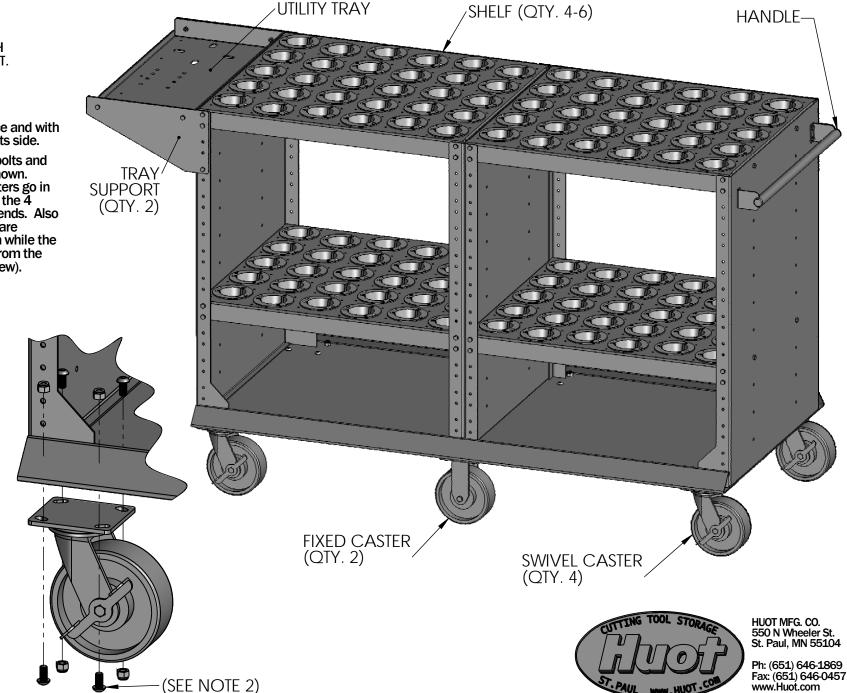

www.Huot.com